

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING

KEEP AWAY FROM WATER

DANGER — To reduce the risk of electrocution:

1. **Always unplug this appliance immediately after using.**
2. Do not use while bathing.
3. Do not place or store appliance where it can fall or be pulled into a tub or sink.
4. Do not place in or drop into water or other liquids.
5. **Do not reach for an appliance that has fallen into water or other liquids. Unplug immediately.**

WARNING — To reduce the risk of burns, electrocution, fire, or injury to persons:

1. **An appliance should never be left unattended when plugged in.**
2. Close supervision is necessary when this appliance is used by, on, or near children or individuals with certain disabilities.

3. Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.
4. **Never operate this appliance if it has a damaged cord or plug, if it is not working properly, or if it has been dropped, damaged, or dropped into water. Return the appliance to a Conair service center for examination and repair.**
5. Keep the cord away from heated surfaces. Do not wrap the cord around the appliance.
6. To avoid burning, do not touch after plugging in water reservoir unit.
7. Do not pick up the sauna while water is hot, because water can spill out.
8. Never block the air openings of the appliance or place it on a soft surface, such as a bed or couch, where the air openings may be blocked. Keep the air openings free of lint, hair, and the like.
9. Never use while sleeping.
10. Never drop or insert any object into any opening.
11. Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
12. Do not use an extension cord with this appliance.
13. Unplug this appliance before filling. Fill reservoir with distilled water only. Do not overfill.
14. Use the Facial Sauna only on a level surface.
15. Do not use additives.
16. Never place face close to sauna in one position as this may cause scalding.
17. **The steam from the facial sauna is very hot. Always close your eyes before using.**

18. Do not use the sauna without the cone.
19. Do not touch steam as it comes out of the base.
20. This ISM device complies with Canadian ICES-001.

SAVE THESE INSTRUCTIONS OPERATING INSTRUCTIONS

This appliance has a polarized plug (one blade is wider than the other). As a safety feature, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.

If you have any skin condition, sensitivity to heat, or other health issues or questions, including those relating to use of this product while undergoing any treatments or taking any medications, please consult with a physician before use.

This product should not be used in the following cases: Tuberculosis, diabetes, benign and malignant tumors, inflammations of the skin, phlebitis and thrombosis, open and fresh wounds, bruises, broken skin or varicose veins.

INSTRUCTIONS FOR USING YOUR FACIAL SAUNA

Before beginning, cleanse your face, following your daily care routine. Lightly pat your favourite moisturizer or eye cream around the eye area.

GETTING STARTED

Use for facial cleansing with both the warm steam and cool mist features.

- Lift facial cone away from the base.
- Lift upper housing in front to access water chambers. The housing is hinged and should lift backward from the front.
- Your facial sauna has two water chambers, one for warmsteam, the other for cool mist. To fill the chambers with water, first unscrew the cap on the warm steam chamber and then lift off the lid of the cool mist chamber. Using the filler cup provided with the unit, fill the warm steam chamber with approximately 2 cupfuls of water, or until the water has reached the maximum fill line ("MAX") in the cool mist chamber.
- Replace both cool mist lid and warm steam screw cap and close hinged lid.
- Place facial cone over unit.
- Plug unit into a 125 volt AC household outlet.



USING YOUR FACIAL STEAMING UNIT

- Your Facial Sauna includes one detachable cone.

USING THE WARM STEAM FEATURE

- For sensitive skin: For sensitive skin, be careful not to position your face too close to the steam or for long periods of time. Check your skin often to prevent skin irritation.
- Set timer; you can set your treatment times in increments of 3, 6, 9, 12 or 15 minutes.
- Turn switch to HOT [🔥] position.
- The light next to "HOT" [🔥] should now be lighted. This indicates that the sauna is on and in use for the designated warm steam function.
- Allow about 3 minutes for steam to generate.
- When the set time expires for the warm steam feature, the sauna will shut off automatically.
- After completion of a timed steam treatment, you may repeat the above steps for another timed treatment, or close pores with the cool mist feature. Before closing pores, wipe away loose dirt from pores.

USING THE COOL MIST FEATURE

- Set timer; you can set your treatment times in increments of 3, 6, 9, 12 or 15 minutes.
- Turn switch to COOL [❄️] Position.
- The light next to "COOL" [❄️] should now be lighted. This indicates that the unit is on and in use for the designated Cool Mist function.
- Allow 2 seconds for water to change over from warm steam to cool mist.
- Cool mist can be used for a period of up to 10–15 minutes. Unit will shut off automatically when water level is lower than water sensor or timed usage period has expired.
- Pat face dry with cloth. Apply your favourite moisturizer.

SPECIAL PAMPERING TIPS FOR DELICATE AREAS

THE EYE AREA

- Give special care to the eye area during your personal facial by lightly massaging additional moisturizer or eye cream on eyelids and under your eyes before you begin.

THE NECK AND THROAT

- Apply your favorite moisturizer to your entire face.
- Mist your face for only 5 minutes, following Instructions for Using Your Facial Sauna.
- Tilt your head backward so your throat is approximately 2 inches from the facial mask.
- Mist your throat for 2 minutes. For best results, accelerate moisturizing process by gently turning neck from side to side.

SPECIAL USES

- Consult your physician or dermatologist for instructions on how to best use the Facial Sauna for your specific condition.

USER MAINTENANCE INSTRUCTIONS

CARING FOR YOUR FACIAL SAUNA

After completing your facial:

- Always turn off and unplug your Facial Sauna from the electrical outlet before cleaning it.
- Let cool, then empty excess water and wipe dry the interior of the facial mask and rim around the opening.
- Wipe the base with a clean, damp cloth, then polish lightly with a dry one. NEVER IMMERSE THE FACIAL SAUNA IN WATER.

- Do not attempt to repair the appliance yourself. Return it to the place of purchase with sales receipt.
- Facial sponge attachments should be cleaned after each use by running them under warm water. Rinse thoroughly and squeeze out any excess water. Allow attachments to air dry thoroughly before reusing. Clean the unit with a dry cloth only. **Do not immerse in water.**

CAUTION


Never allow the power supply cord to be pulled, twisted or severely bent. Never wrap the cord tightly around the unit. Damage will occur at the high flex point of entry into the unit, causing it to rupture and short circuit. Inspect the cord frequently for damage. **Stop use immediately if damage is visible or unit stops or operates intermittently.**

If cord or unit is damaged or does not operate properly, return it for repair to an authorized Conair Service Representative only. No repairs should be attempted by the consumer.


The Facial Sauna is for household use only.

STORAGE – Important

When not in use, your unit should be disconnected and stored in a safe, dry location, out of reach of children. Do not wrap line cord around unit. Allow the cord to hang or lie loose and straight at the point of entry into the unit.

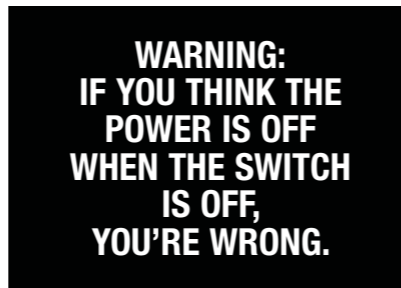

KEEP AWAY FROM WATER

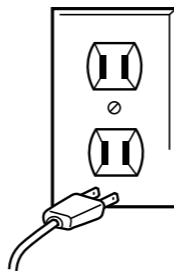

Everyone knows that electricity and water are a dangerous combination. But did you know that an electrical appliance is still electrically live even if the switch is off? If the plug is in, the power is on. So when you are not using your appliances, keep them unplugged.

ALWAYS UNPLUG SMALL APPLIANCES

LIMITED ONE YEAR WARRANTY

Conair will repair or replace, at our option, your appliance free of charge for 12 months from the date of purchase if the appliance is defective in workmanship or materials.

To obtain service under this warranty, return the defective product to the service centre listed below together with your sales slip and \$5.50 for postage and handling. In the absence of a receipt, the warranty period shall be 12 months from the date of manufacture.

ANY IMPLIED WARRANTIES, OBLIGATIONS, OR LIABILITIES, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED IN DURATION TO THE 12 MONTH DURATION OF THIS WARRANTY.

IN NO EVENT SHALL CONAIR BE LIABLE FOR ANY SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY, EXPRESS OR IMPLIED, WHATSOEVER.

This warranty gives you specific legal rights, and you may also have other rights which vary from province to province.

Model TG3704C
14CN146160

IB-12636

SERVICE CENTRE:

Conair Consumer Products ULC
100 Conair Parkway,
Woodbridge, Ontario, L4H 0L2.

1-855-926-6247 (1 8559 CONAIR)

©2014 Conair Consumer Products ULC

www.conaircanada.ca

Consumer Call Centre E-mail :
Consumer_Canada@Conair.com

Printed in China

true glow™

Warm Steam/Cool Mist
Facial Sauna



Have a Question?

Please do not return this product to the retailer.

Call Us First!

Our customer service and product experts are ready to answer ALL your questions.

Please call our TOLL-FREE customer service number at : 1-855-926-6247 or visit us online at www.conaircanada.ca

CONAIR®

Model TG3704C